



Toshiba Satellite A210 RAM Replacement

This guide will show you how to remove the RAM from a Toshiba Satellite A210.

Written By: Devin



INTRODUCTION

In this guide you will learn how to remove the RAM. In the case of a broken or unresponsive RAM a replacement may be required. Before beginning this guide you should have all required tools that are listed.



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — RAM



- Remove the **captive** screw holding the ram cover with a PH1 screwdriver.
- Remove the RAM cover

Step 2

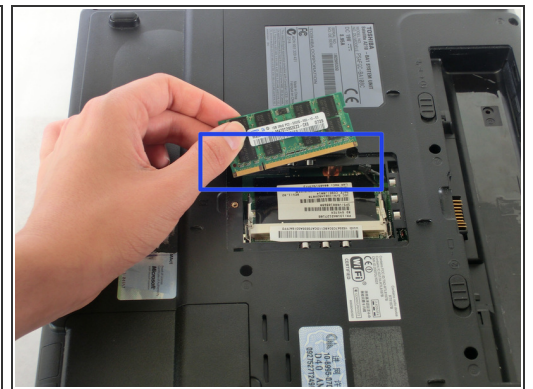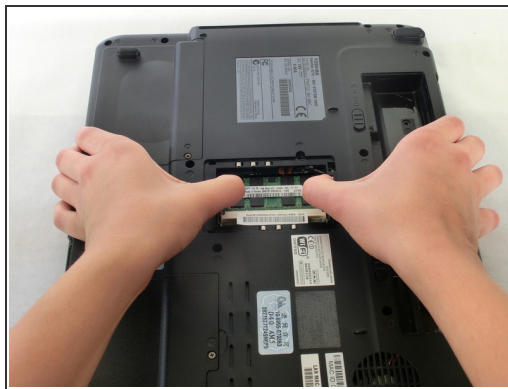

- Push outwards on the metal tabs to release the RAM.
- Remove the RAM. Some force may be needed.

⚠ Be careful not to touch the gold pins on the RAM chips as there may be a build-up of static electricity. This can fry the parts of the chip that house memory.

In order to reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:58:48 PM.